

VariDesk® Essential Vertical Lift 30



Assembles in
Minutes




Holds up to
25 lb (10 kg)


vari®



DESKTOP CONVERTER
x1

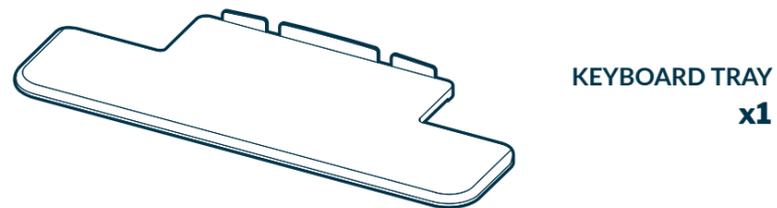

KEYBOARD TRAY
x1

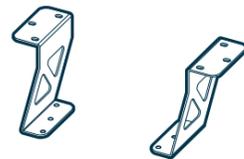

KEYBOARD TRAY
BRACKETS
x2



M5x12 PHILLIPS PAN HEAD
MACHINE SCREW
x6



M5x12 COUNTERSUNK PHILLIPS HEAD
MACHINE SCREW
x6




VELCRO STRAPS
(LOCATED ON CONVERTER FRAME)
x2

Tools Needed (Not Included)

• PHILLIPS HEAD SCREWDRIVER


1

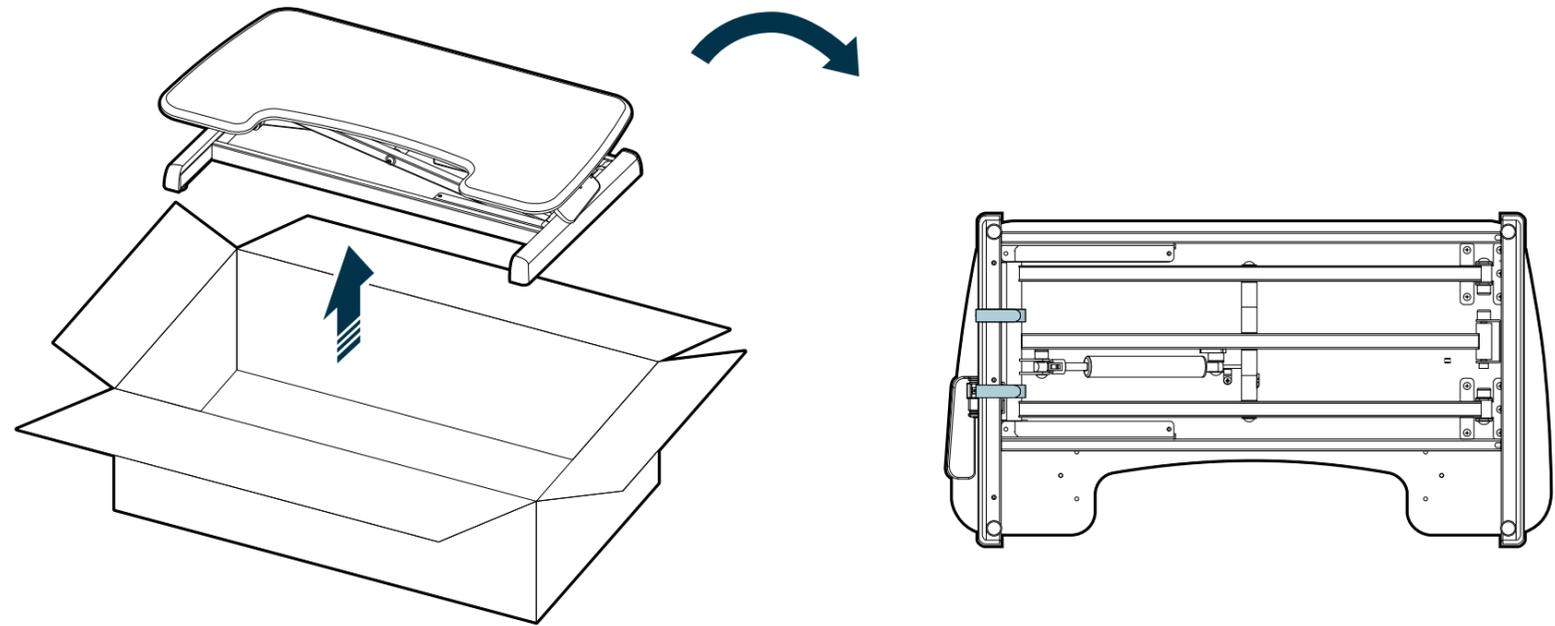

Remove the desktop converter from the box. Flip it over, and remove the velcro straps that are located on the frame.


NOTE: Do not discard the velcro straps as they can be used to neatly gather your cables and cords.

2

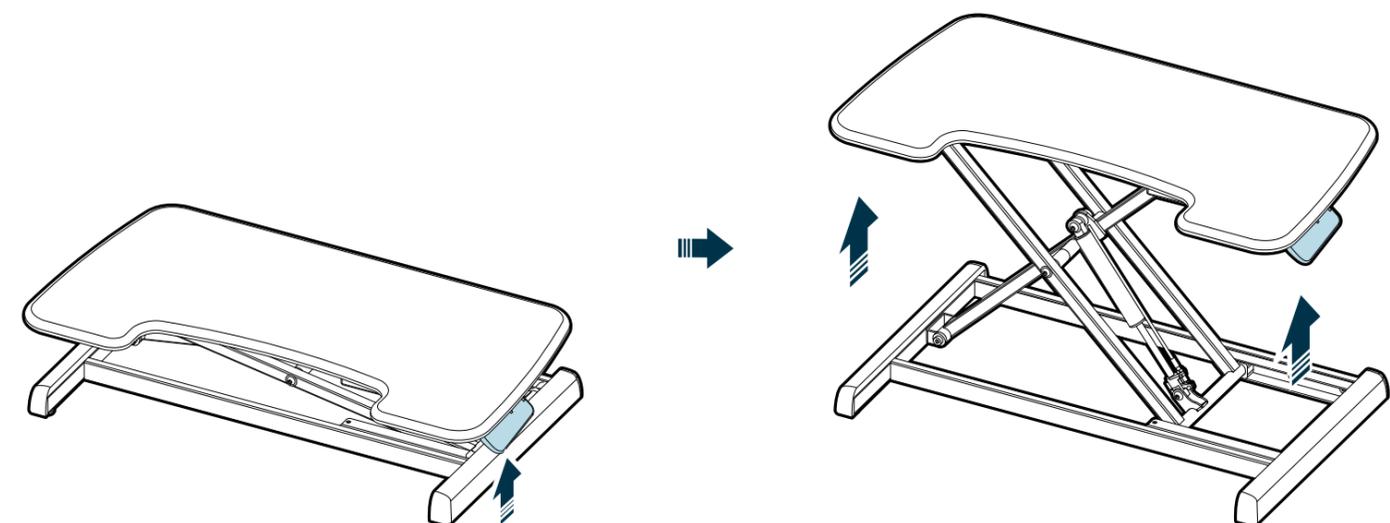


Squeeze the handle underneath the right side of the converter's top to raise the converter.

3

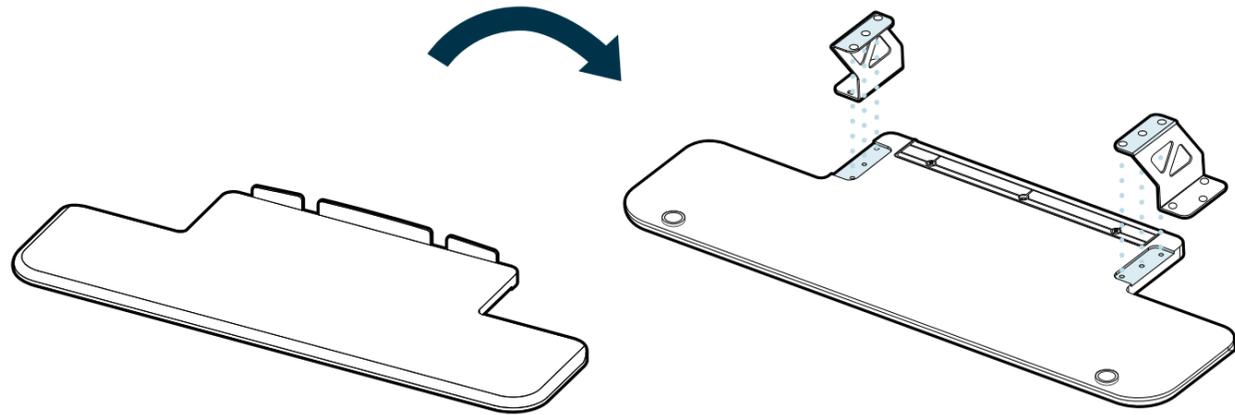




Flip over the keyboard tray so that the countersunk holes are facing up. Align the keyboard tray brackets as shown in the above illustration.

4

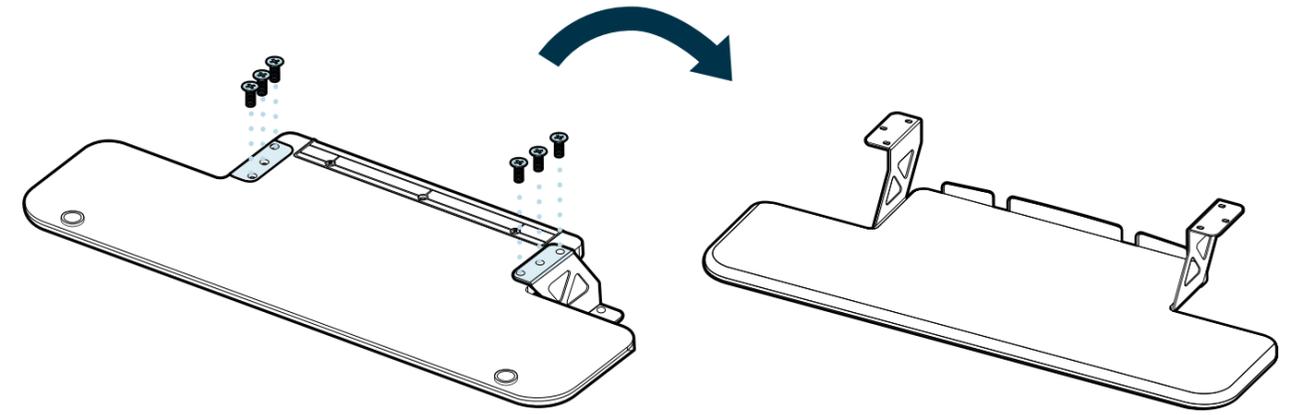

Use a Phillips head screwdriver to insert the countersunk screws into the countersunk holes. With all 6 screws in place, flip the keyboard tray back over.

5

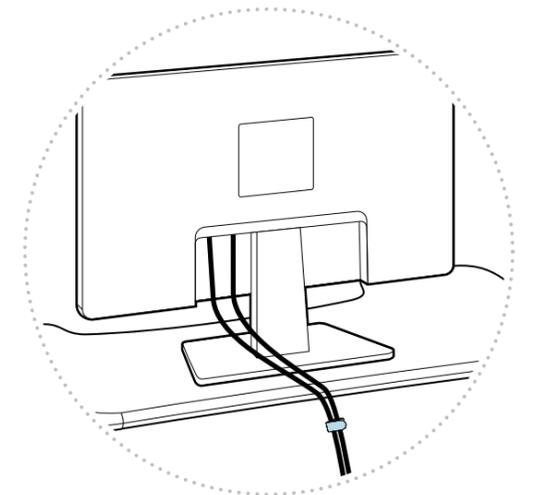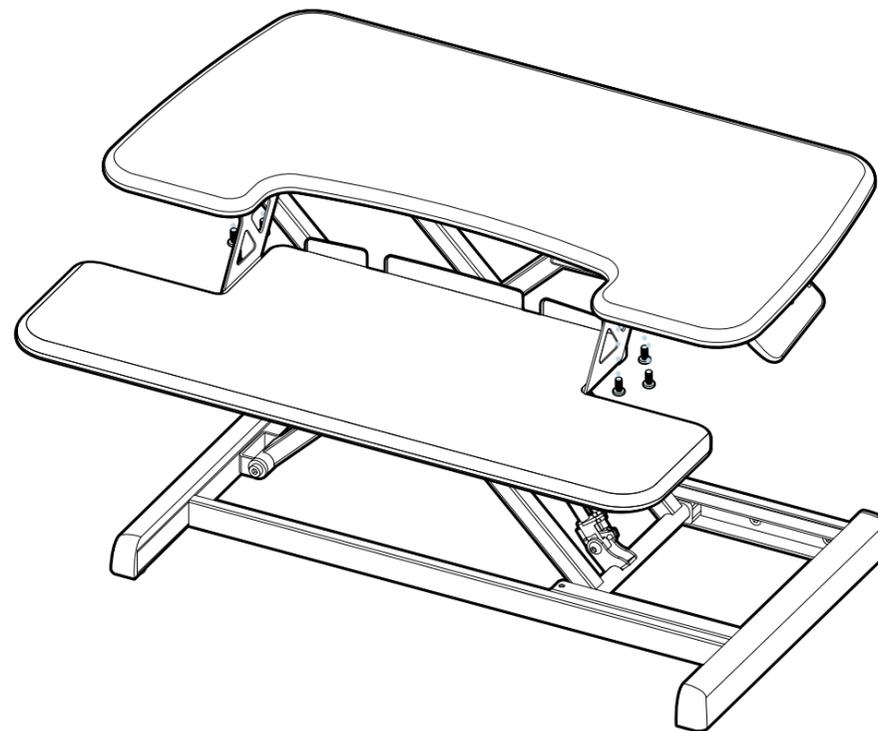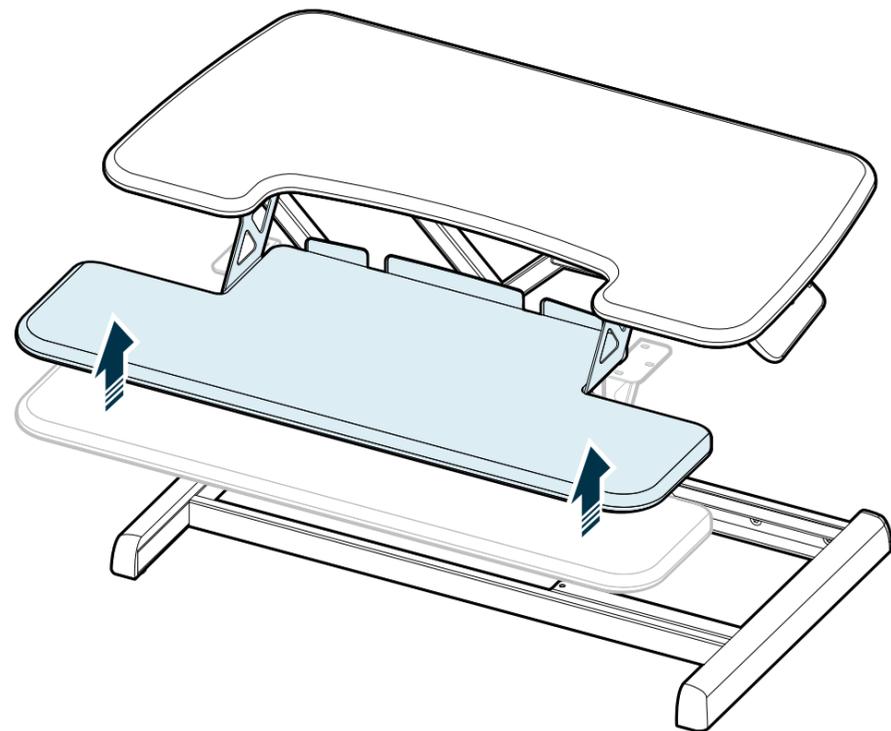

Line up the keyboard tray brackets with the pre-drilled holes on the underside of the top tier. Using a Phillips head screwdriver, screw in the pan head screws.

The included velcro straps can be used to neatly gather your cables and cords.

Patent and trademark information:
vari.com/patents
 ©2022 Varidesk, LLC
 All rights reserved.

