


# Standing Work Table

**vari**<sup>®</sup>

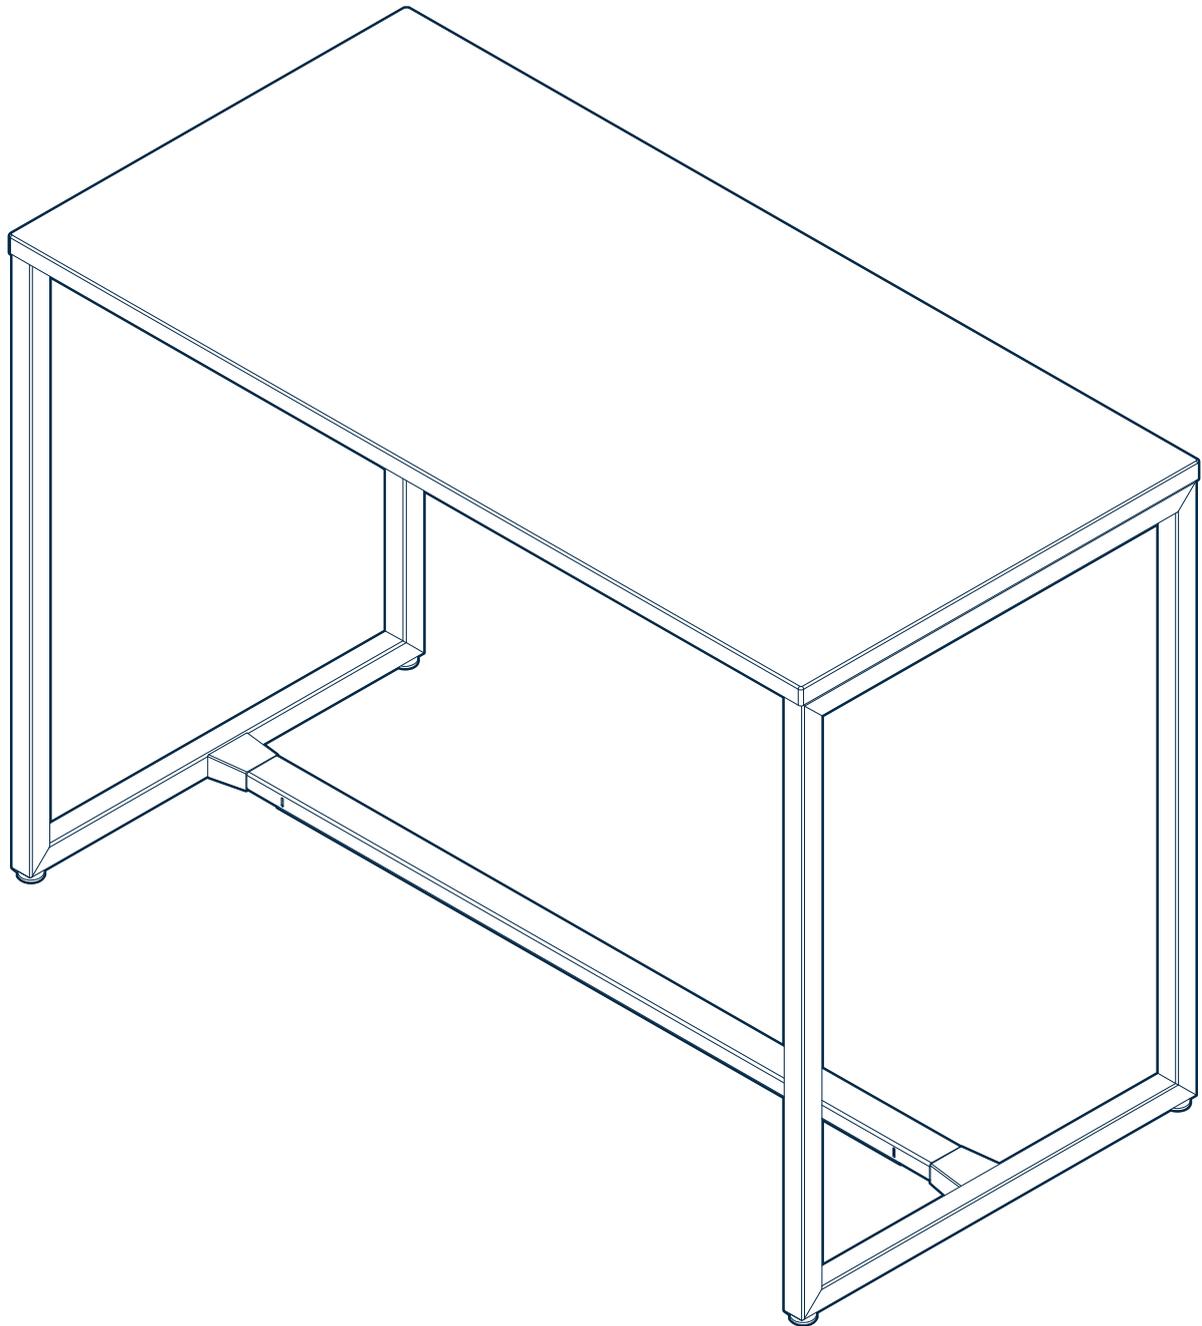

All Tools  
Provided




Two People  
Required



Supports up to  
300 lb (136.08 kg)


## Box 1 of 3

TABLE TOP  
x1

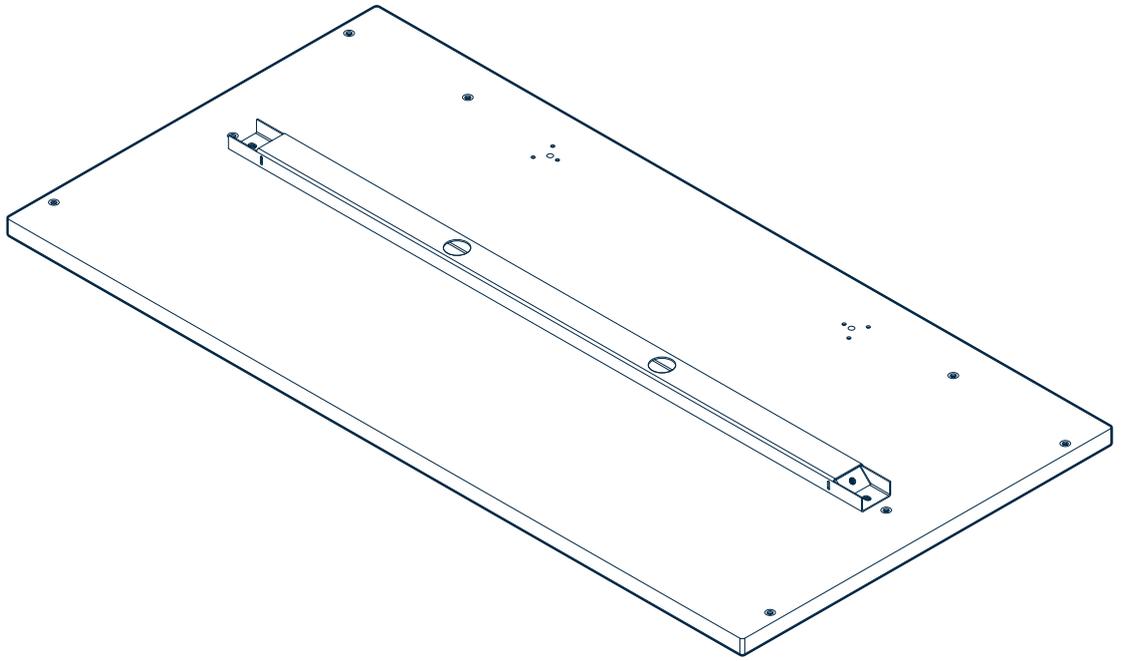


## Box 2 of 3

CROSSBAR  
x1

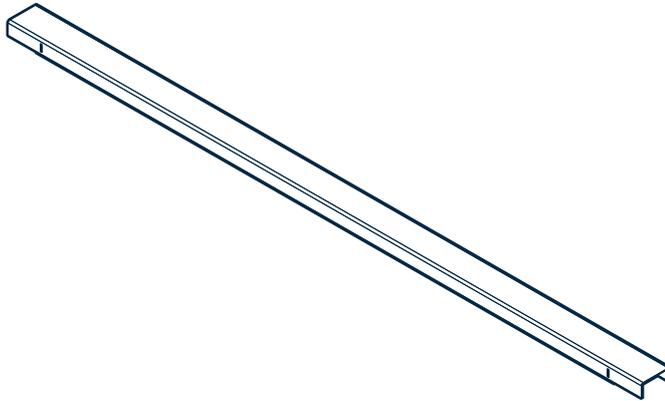

## Box 3 of 3


TABLE LEGS  
x2

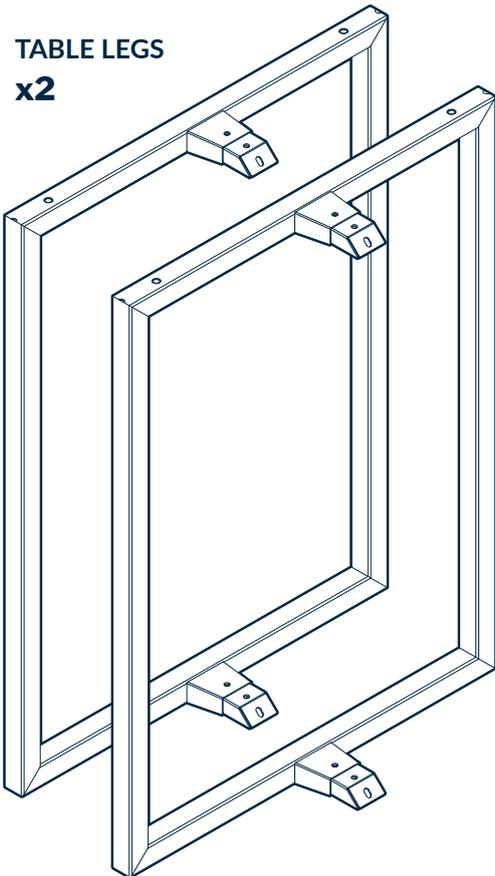

M8X20L  
SCREW  
x8



LOCK  
WASHER  
x12




M8X55L  
SCREW  
x4



FLAT  
WASHER  
x12




5MM  
ALLEN KEY  
x1

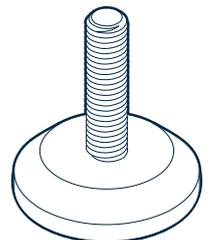

LEVELING  
FOOT PAD  
x4

1

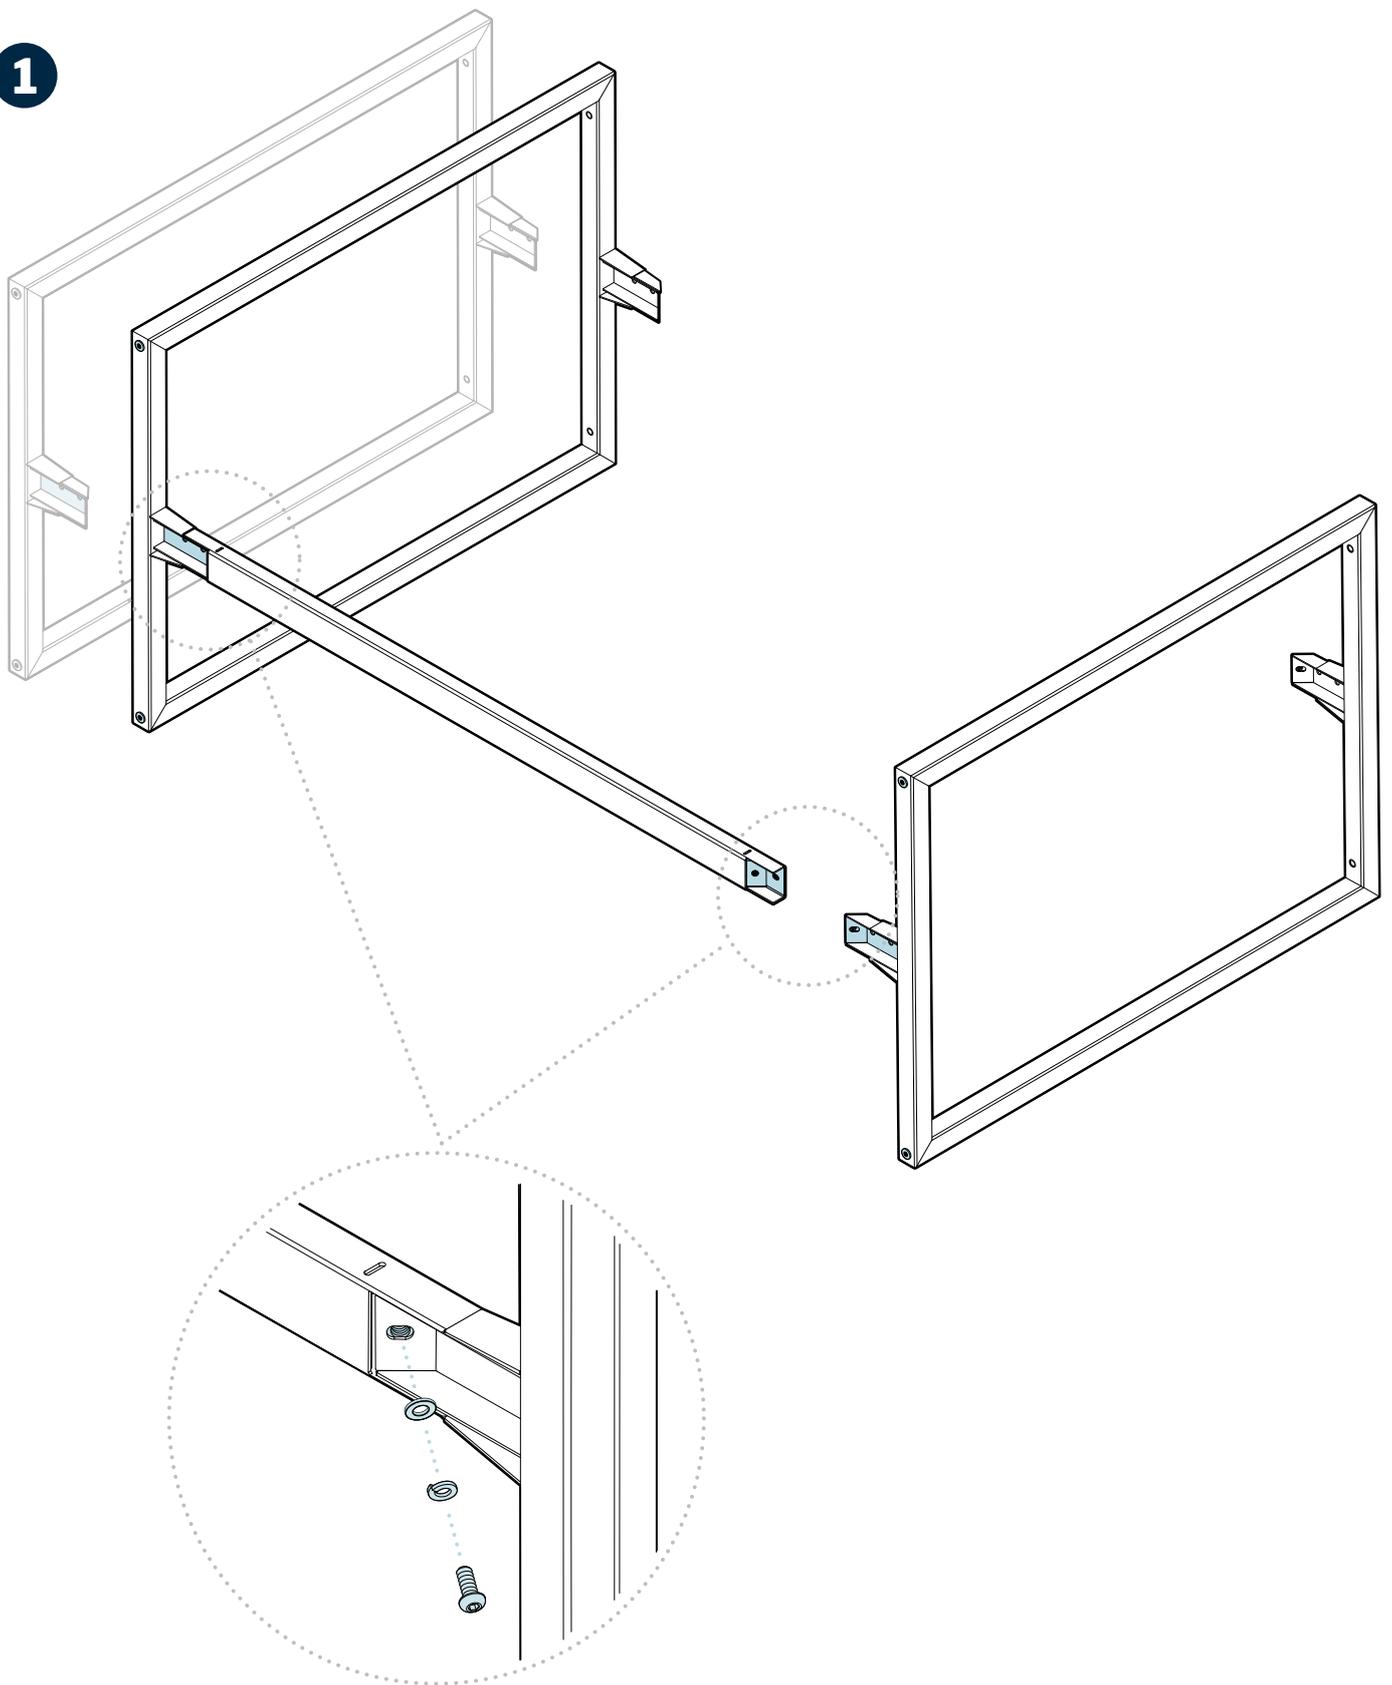


Position the crossbar on its side, with the threaded openings on the ends visible, and orient the leg frames on their sides with the foot pad holes (holes closest to the edges) toward you. Align the lower leg frame inserts with the crossbar's cutouts.

Place a lock washer and then a flat washer onto two short screws (M8x20L), forming two sets. Insert each set into a slanted opening where the leg frame inserts meet the crossbar. Use the provided Allen key to secure the leg frame inserts to the crossbar.

**NOTE:** It may be necessary for one person to hold the crossbar and legs together while another person secures them.


2

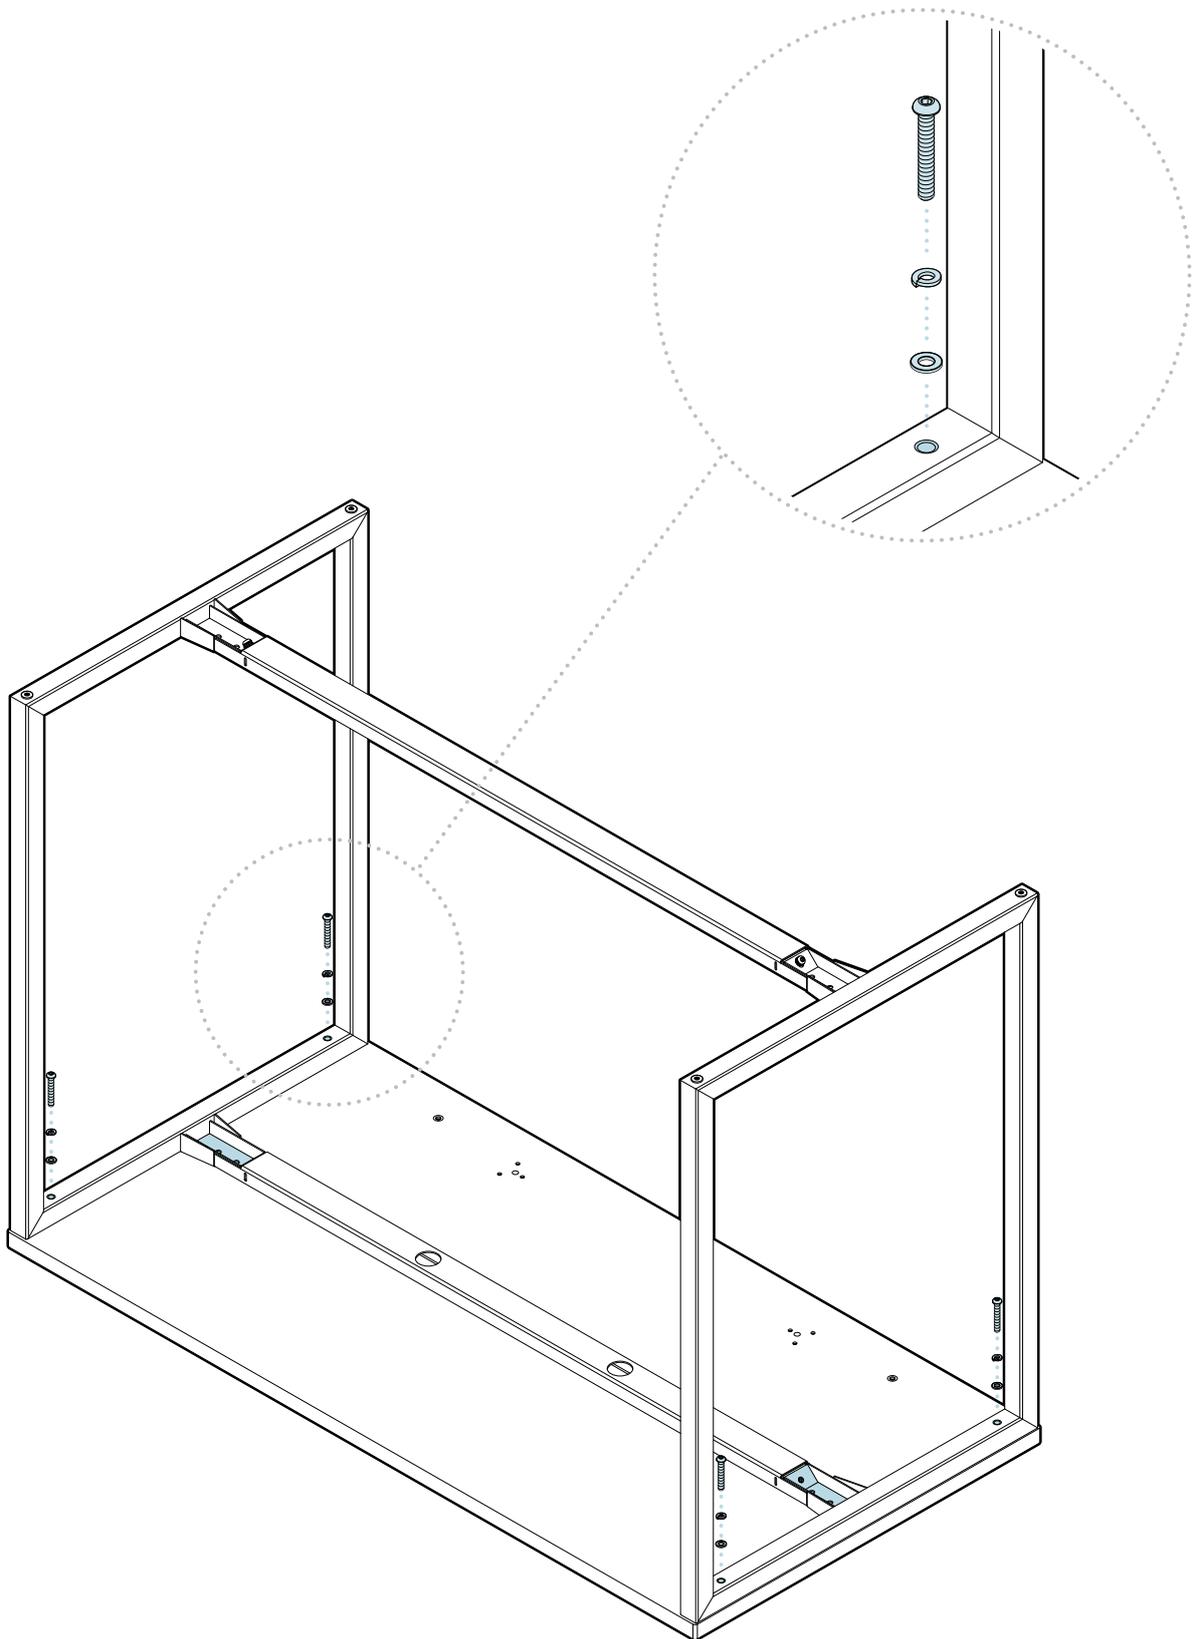

**NOTE:** To prevent any surface scratching, we recommend continuing the table assembly with the table's top in its box (or on another smooth, debris-free flat surface). With the table top face-down and frame-up, lower the leg assembly onto the table top, and align the leg frame inserts with the table top crossbar's cutouts.


Place a lock washer and then a flat washer onto each of the four long screws (M8x55L), forming four sets. Insert each set into an opening in a corner of the leg frame, and use the provided Allen key to secure the leg frame to the table top.

3

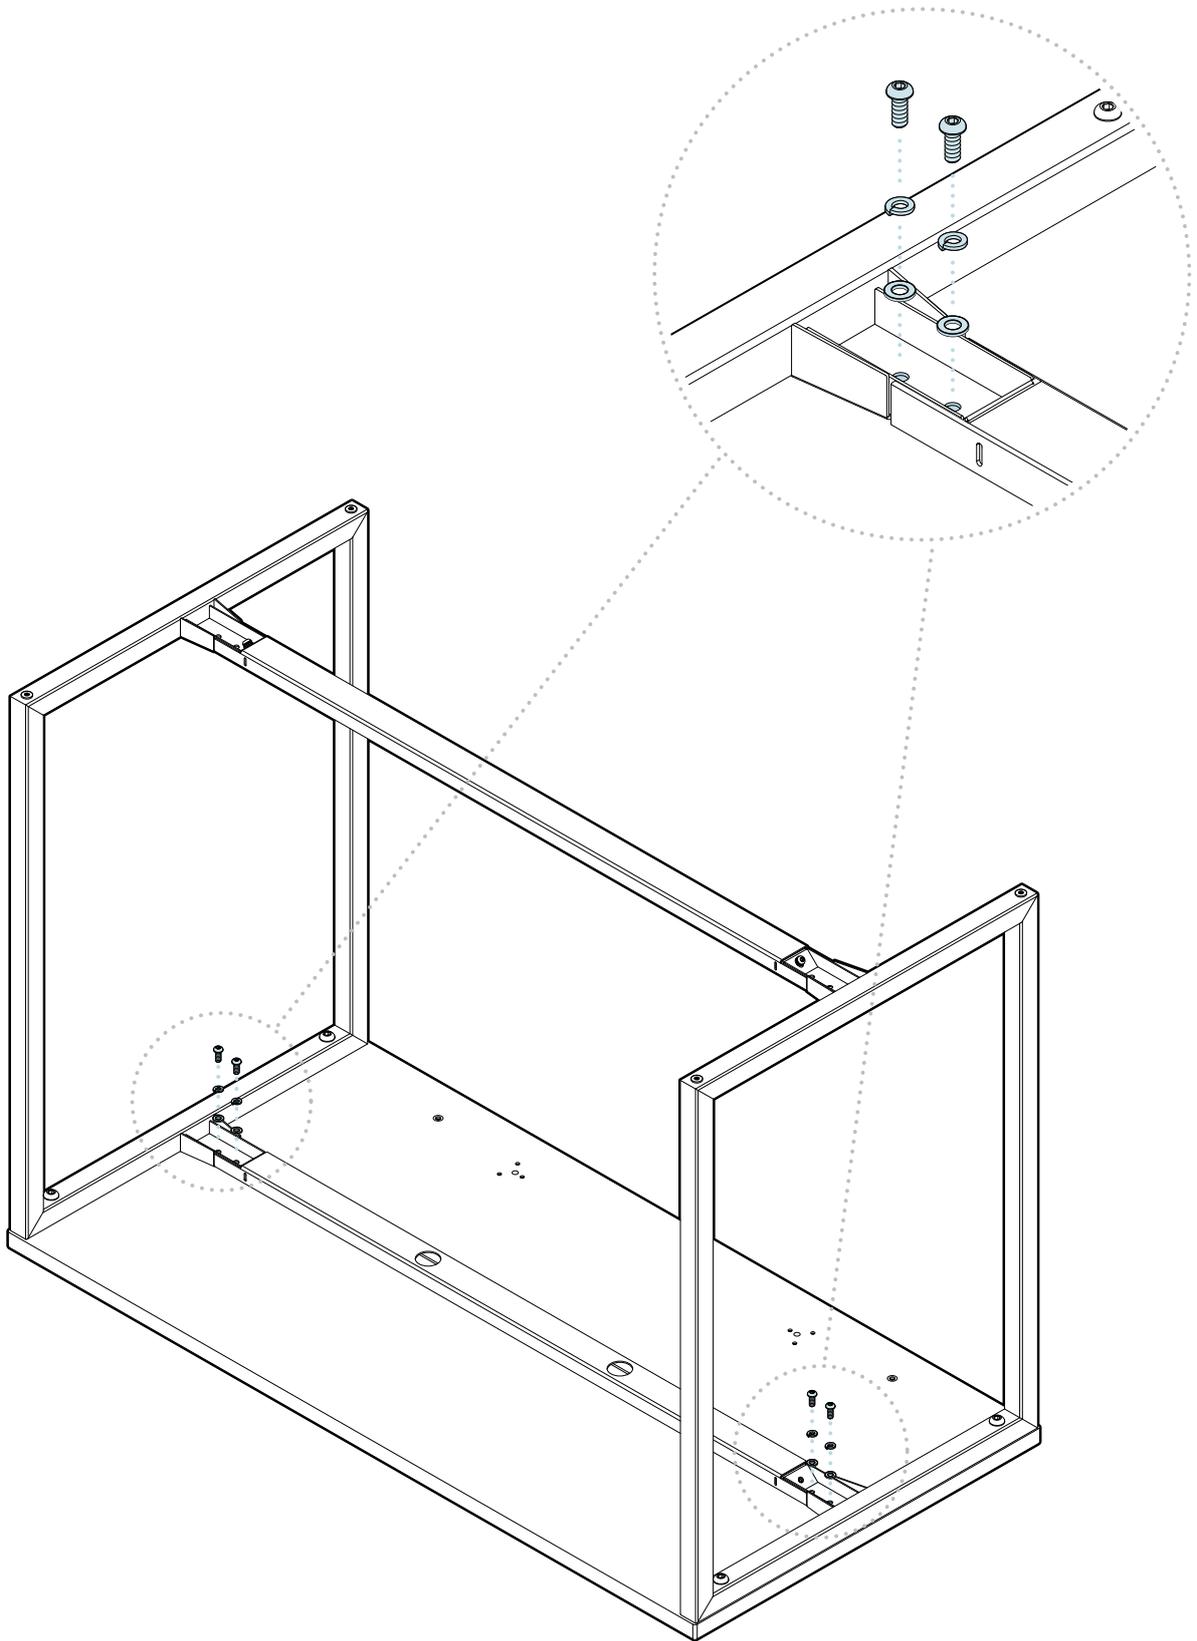


Place a lock washer and then a flat washer onto four of the short screws (M8X20L), forming four sets. Insert each set into a flat opening where the leg frame inserts meet the table top frame. Use the provided Allen key to secure the leg frame inserts to the table top crossbar.

4

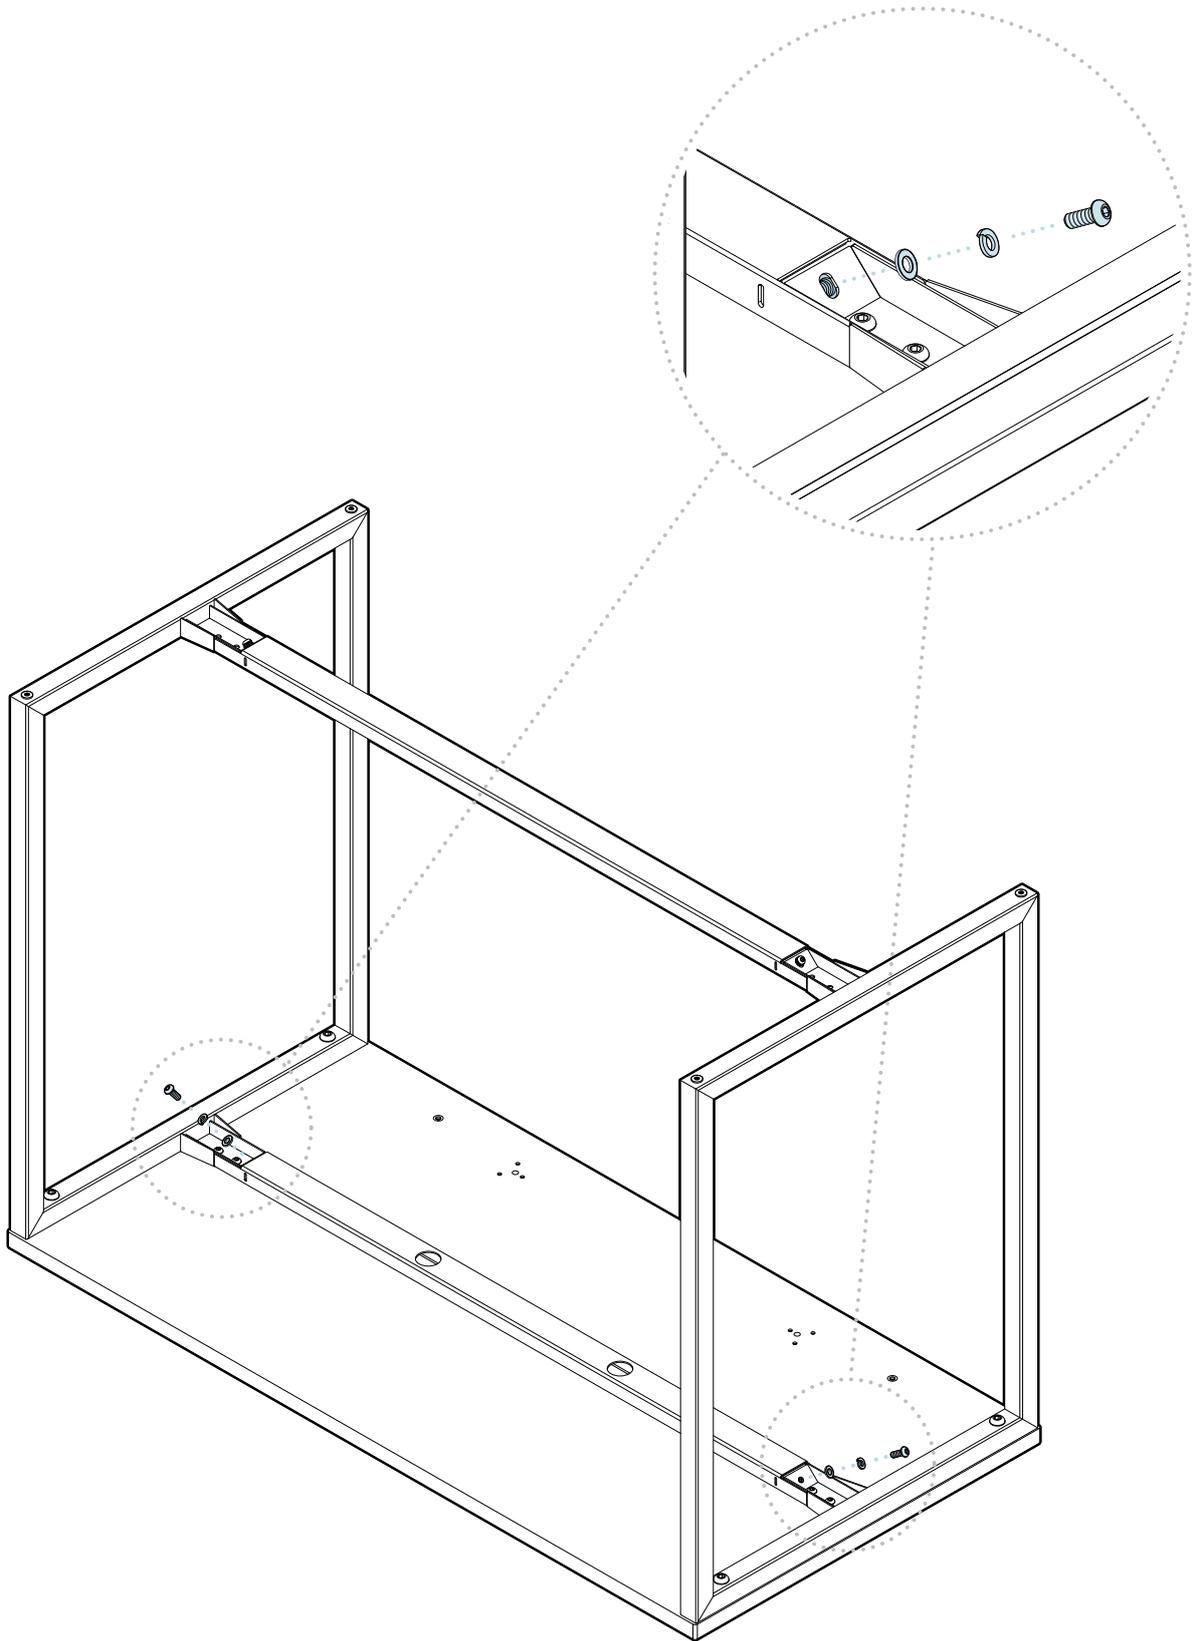


Place a lock washer and then a flat washer onto the remaining two short screws (M8X20L), forming two sets. Insert each set into a slanted opening where the leg frame inserts meet the table top frame. Use the provided Allen key to secure the leg frame inserts to the table top crossbar.

5

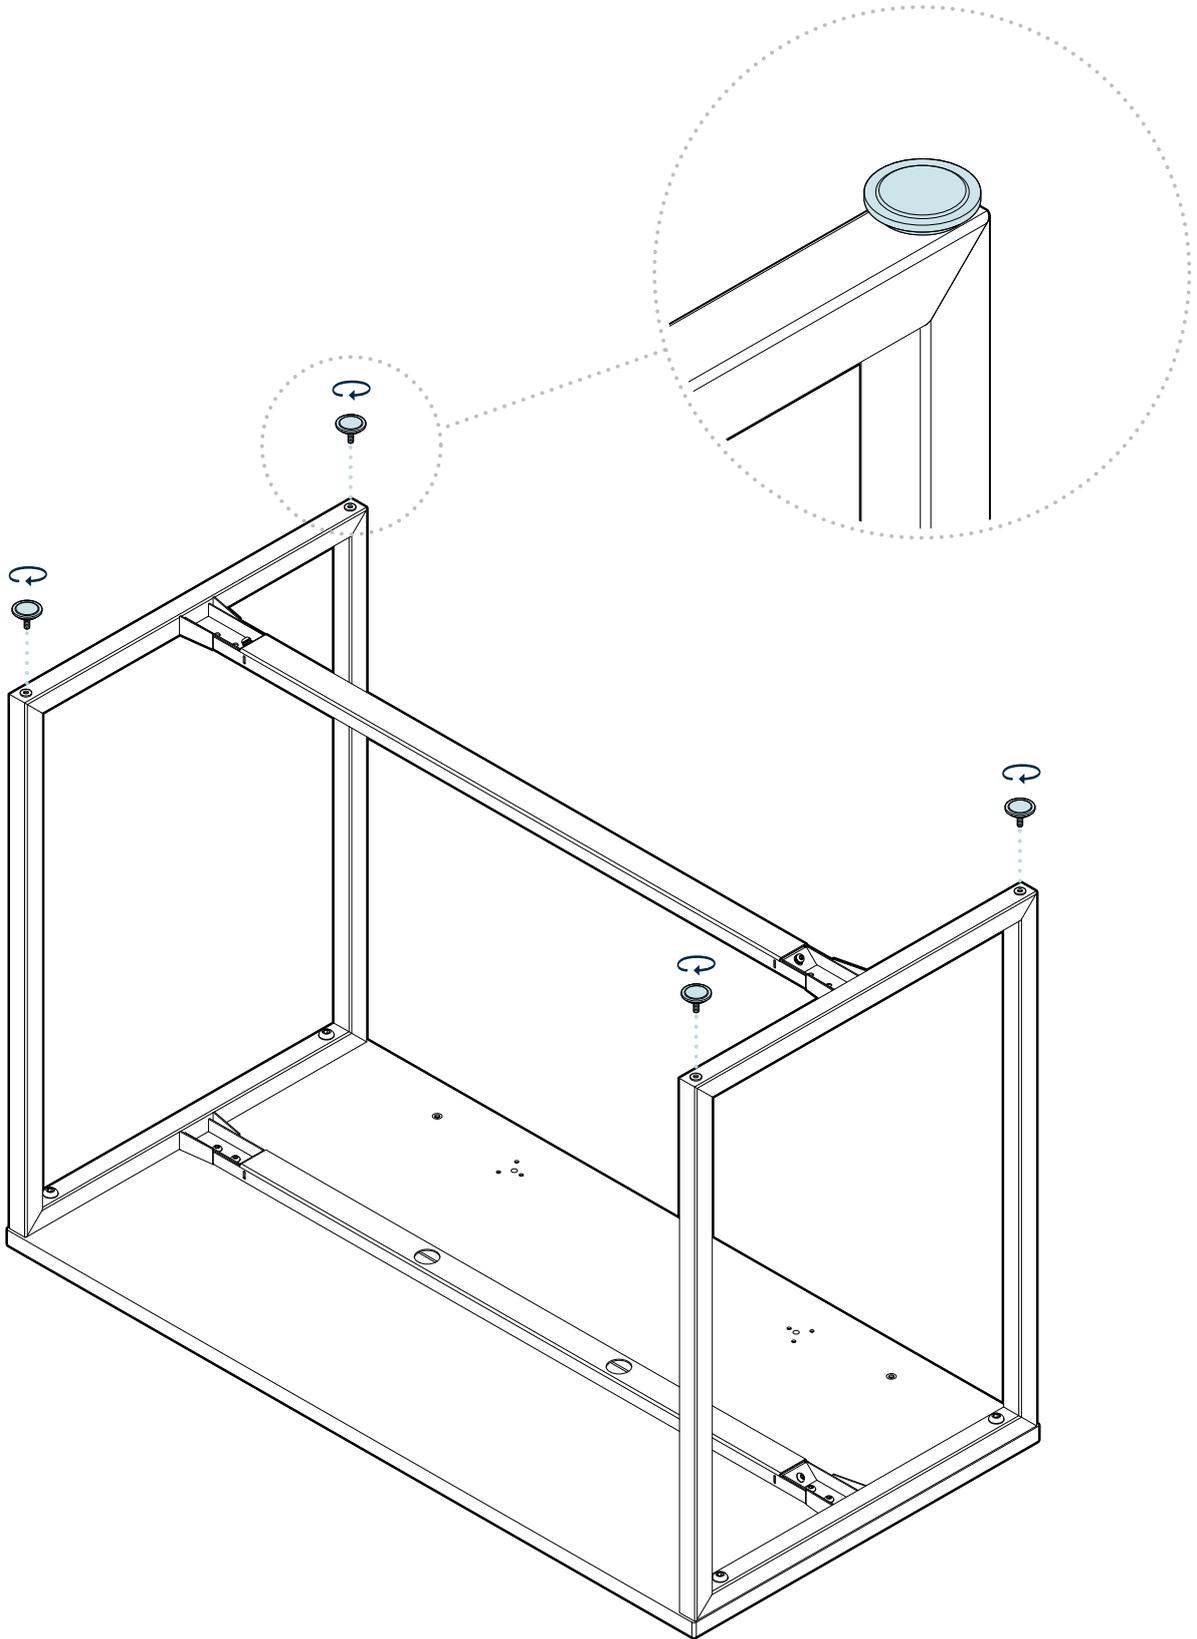

Tighten the four foot pads, by hand, into the corners of the legs.

6

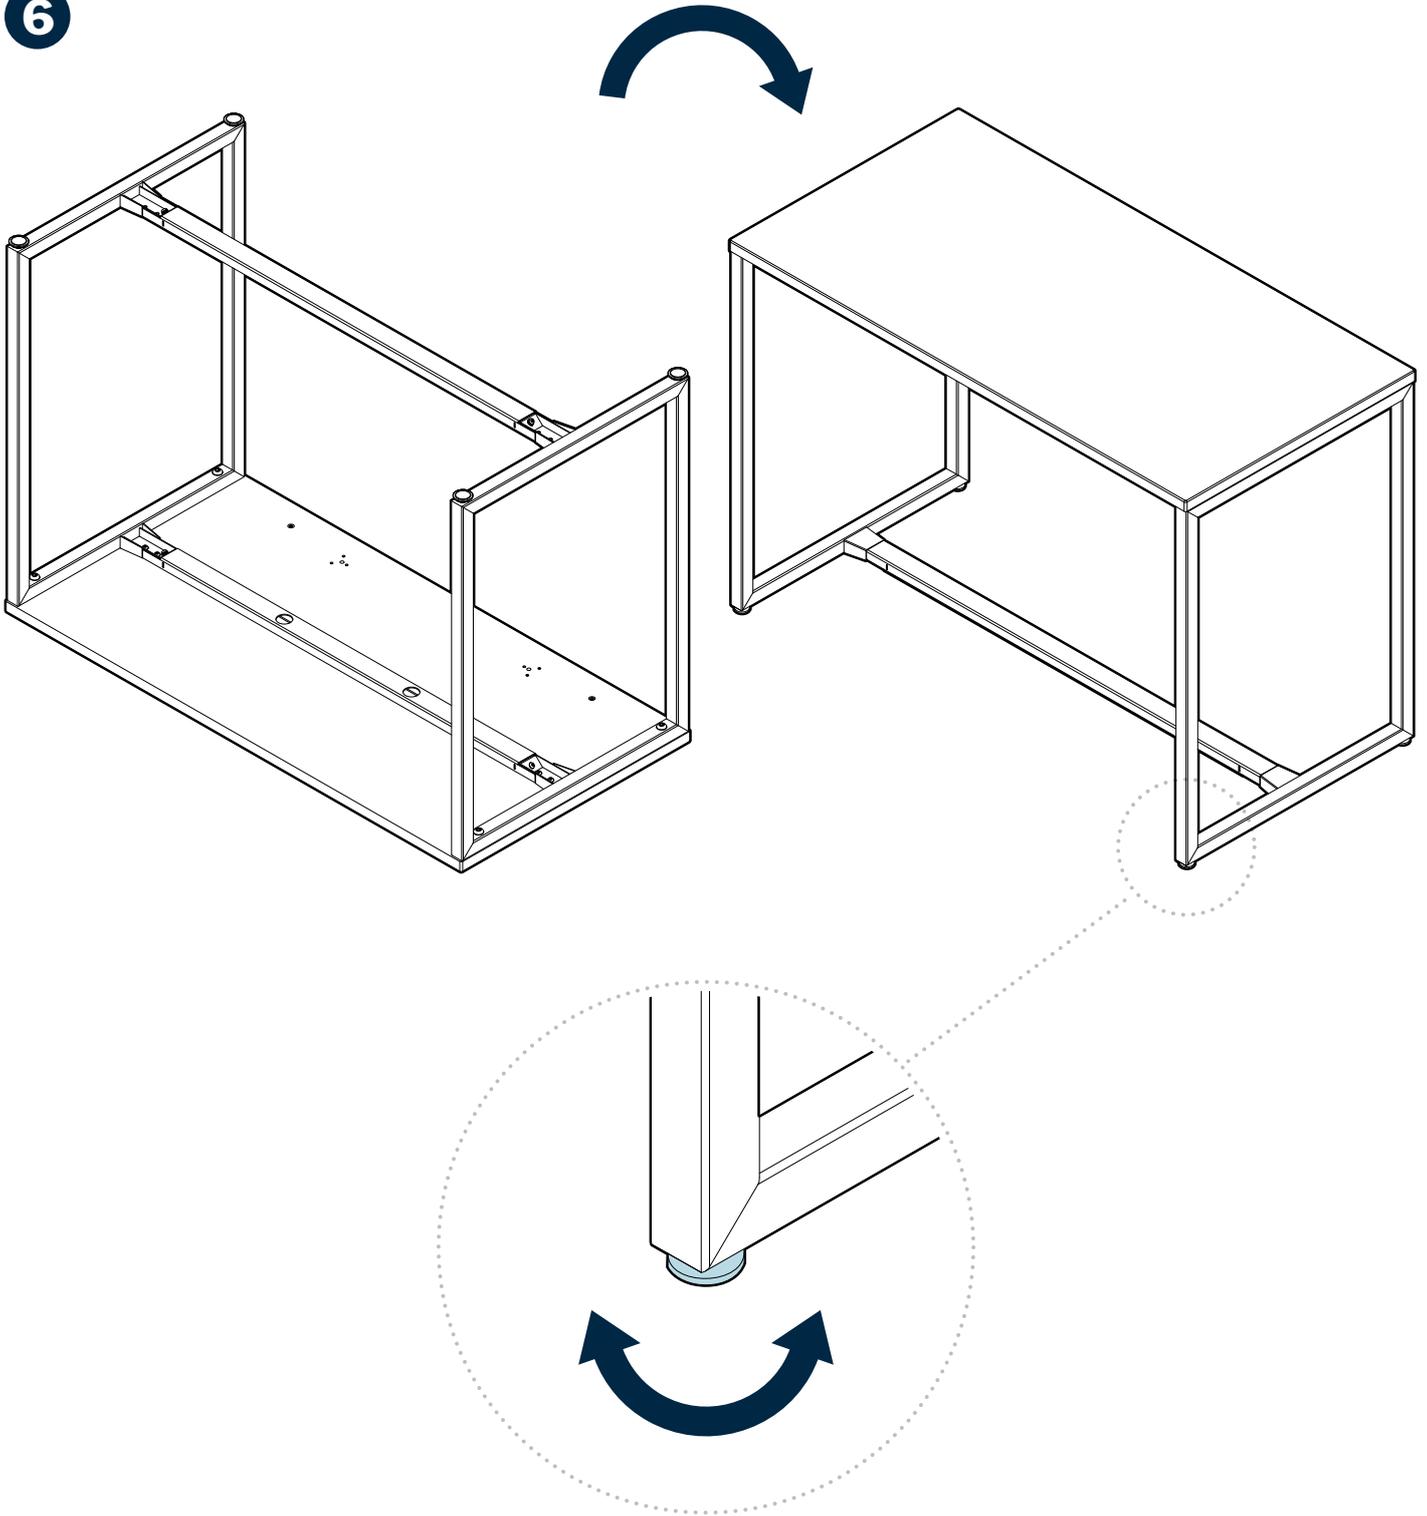

**NOTE: If installing a Cable Management Tray, do so before turning the table into an upright position.**

With assistance, lift the table, turn it into an upright position, and set it down on its foot pads. If needed, turn each foot pad until the table is level.



**(800) 207-2587**

Patent and trademark information: [vari.com/patents](https://vari.com/patents).  
©2023 Varidesk, LLC All rights reserved.